

60-Minute Visual Timer with Magnetic Dry Erase Board

 
INSTRUCTIONS FOR USE

HOW TO USE YOUR 60-MINUTE VISUAL TIMER WITH MAGNETIC DRY ERASE BOARD



- on-rechargeable batteries are not to
- Non-rechargeable batteries are not to be recharged. Do not force discharge, recharge, disassemble, heat above 100°C/212°F or incinerate. Doing so may result in injury due to ventring, leakage or explosion resulting in chemical burns. Ensure the batteries are installed correctly according to polarify (+ and -). Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.









Recommended

 Visual Timer





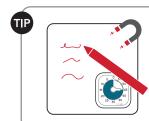



Scan the QR code to download these instructions in other languages or visit:

timetimer.eu/PROApplied Instructions (

INSTALL 1 AA/1.5V BATTERY

The Time Timer 60-Minute Visual Timer operates on one (1) AA/1.5V battery. (Not Included). The battery cover is located on the back of the timer. You may need to remove your timer from the Dry Erase Accessory by gently pushing on the product from the back. Once removed, simply lift battery cover up from the bottom edge to insert AA battery into compartment. Close battery compartment by pressing closed until you hear a "click"

CHOOSE YOUR SOUND PREFERENCE (HIGH/LOW)

The timer itself is quiet—no distracting ticking sound—but you can choose the volume of the alert sound when time is complete. Simply use the high/low switch on the back of the timer to control audio alert volume.

INSERT YOUR TIMER INTO YOUR DRY ERASE BOARD **ACCESSORY**

Place your 60-Minute Visual Timer into the Dry Erase Board by inserting it into the cutout provided on the Dry Erase Board Accessory. Gently push all corners of the timer until flush with the Dry Erase Board Surface.

SET YOUR TIMER

Turn the center knob on the front of the timer counterclockwise until you reach your chosen amount of time. The set knob can be set to any point on the timer face and can be manually moved clockwise or counter-clockwise without harming the mechanism. However, gentle handling will prolong the life of the timer.

COUNTDOWN

Immediately, your new timer will begin to countdown, and a quick glance will reveal the time left thanks to the high contrast disk and large, easy-to-read numbers.

When time has elapsed, your new timer will begin to beep continuously and progressively faster for one minute. To stop the audible alert, simply press the alert off button on the top of the timer.

TIP: Use the dry erase surface to keep your tasks organized. This multifunctional board is magnetic and serves as a message center. Attach special notes or favorite photos, alongside your to-do list and visual timer. Manage time-sensitive messages, create visual schedules, jot down to-do lists, and keep everyone on track.

Make Every Moment Count!®

timetimer.eu

Robo Educational Toys B V Seggelant West 9/G, 3237 MJ Vierpolders, The Netherlands Support: info@robo-toys.com More timers + accessories: www.timetimer.eu

THANK YOU FOR YOUR PURCHASE!

This product purchase entitles you to one year of premium access to the Time Timer® App*.



To register your app, scan QR code, and follow prompts.



*Offer may only be redeemed once, regardless of quantity purchased.